




COLLECT APPLICATION INFORMATION FOR EASY DATA TRANSFER

The Drive by Download™ is a Wi-Fi data transfer system that collects, downloads and compiles application data. Transferring data using Drive by Download™ involves a truck-mounted wireless bridge and antenna that communicates with a wireless access point or base station mounted in your facility. The operator drives within a 250-foot radius of the base station and data is automatically transferred for later analysis and reporting, resulting in usable information that can help you make effective decisions to improve overall operations.



Drive by Download Truck Unit

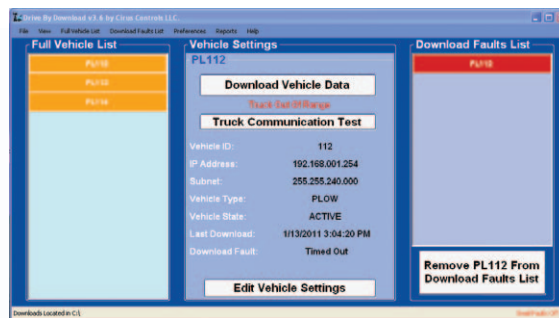

Product Summary

Product Application

Transfer Technology

Transferable Data Format

Data Transfer Distance

Data Transfer Rate

System Components

Base Station Computer Requirements

System Mounting

- Wi-Fi data transfer system
- Compatible with SpreadSmart™ and Data Shark™ data collection and storage devices
- Multiple vehicle types (mowers, sprayers, sweepers, utility vehicles)
- Ability to store electronic data from vehicle and download information in a usable format
- Wireless transfer (Wi-Fi) 802.11n compliant
- ASCII comma delimited format
- Up to 250 feet in a clear line of sight between antennas
- Maximum of 512kbps (thousand bits per second)
- Truck-mounted wireless bridge and antenna
- Base station mounted wireless access point
- Windows XP-equipped PC or laptop with on-board network connection
- Computer is not supplied with Drive by Download™ system

